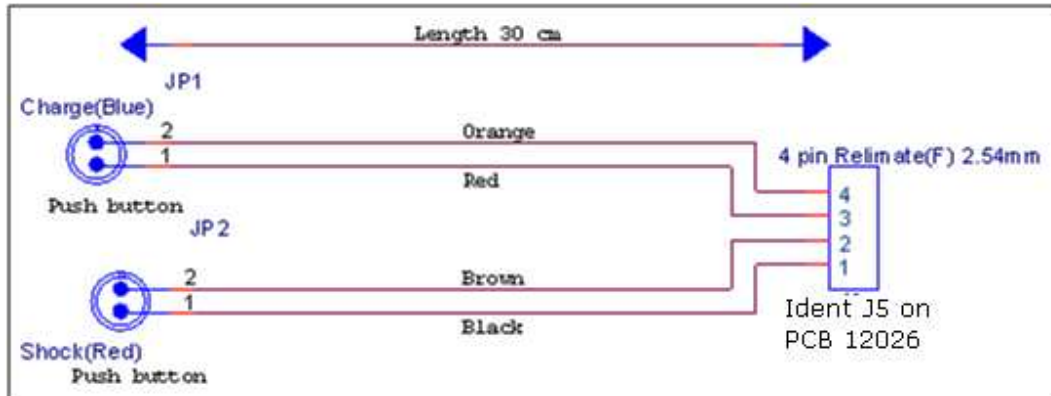## Cable FP10

Push Button fitting to front

1. The BLUE push button is used for charging the unit remotely.

2. The RED push button is used for discharging the unit remotely.

➢ Make connection as per shown in below picture.

- If the unit is not charging using the BLUE push button, check if it is charging using the 'Charge' button on the Apex handle.

- If the unit is not discharging using the RED push button, check if it is discharging using the 'Discharge' buttons on both the handles.