

Cable FP2


Note: Use Heat shrink sleeve on both sides to all cables.
Cable Length is without connector.
Color code given is recommended color code.
Twist the cables.

**FP - Front Plate, BP - Back Plate, PS - Power Supply, DC - Data Cable
SP - Side Plate**

Cable: FP2 - Keyboard connection Length: 28 cm

Specification of Connector 1: 4 pin Relimate connector (F) 2.54mm on J2 keyboard

Specification of Connector 2: 6 Pin Relimate Connector (F) 2.54mm
J10 on 2K12032

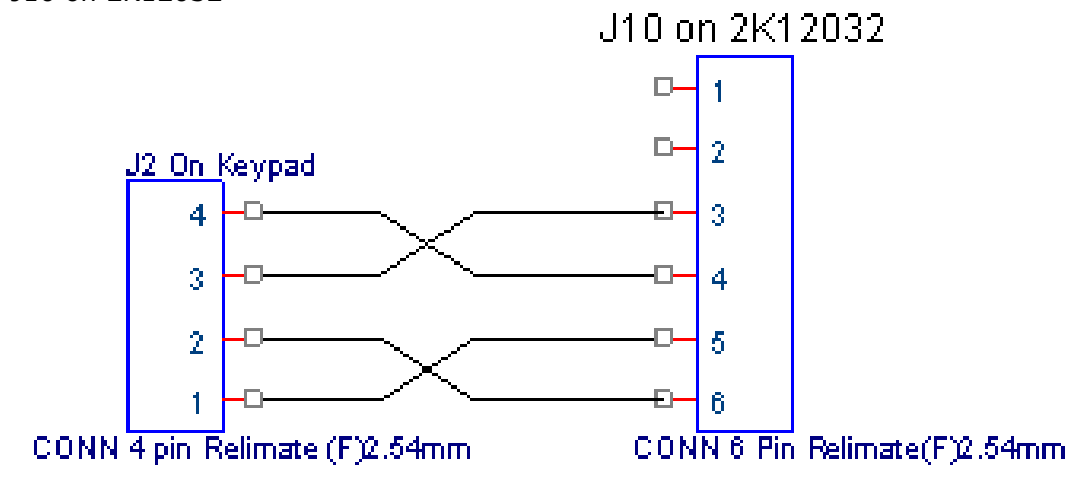

Keyboard--Front side

