

Cable FP4

Note: Use Heat shrink sleeve on both sides to all cables.
Cable Length is without connector.
Color code given is recommended color code.
Twist the cables.


**FP - Front Plate, BP - Back Plate, PS - Power Supply, DC – Data Cable
SP – Side Plate**

**Cable No: FP4-Alarm LED connection
Length: 30 cm**

Specification of Connector 1: 3 pin SHS relimate connector, **J1** on 2k12032 PCB

Specification of Connector 2: 3 pin SHS relimate connector, **J1** on LED PCB

Cable Diagram:

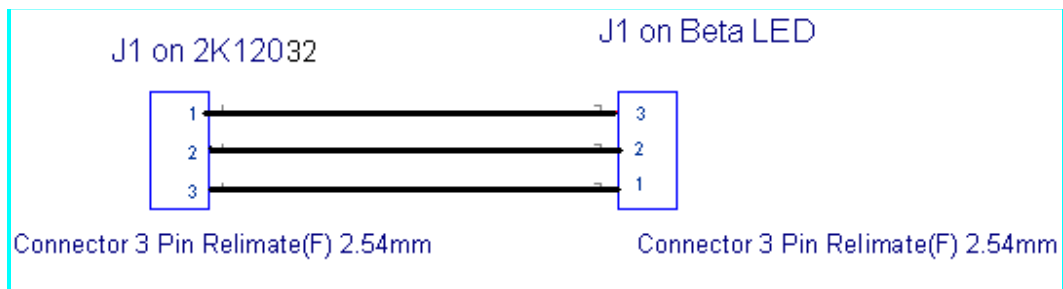

Connection details:

Connector 1	Wire Color (7X36 PVC wire)	Connector 2
1	Black	3
2	Brown	2
3	Red	1