

Cable No: - FP8

Length: 30 cm

Cable Name: Assembly of Black wire one side Golden lug & other side Batt contact clip (FP8)

Cable Type: 1 Sq mm

Note:


After crimping battery contact clip, put solder on it. After this use heat shrink cables sleeves & then push the plastic cap on clip.

Placement of the cable

Golden lug – U plate of Apex handle (Backside of the front panel, on the Apex handle)

Battery contact clip – On PCB 12026 ident (CON 6)

Diagram:

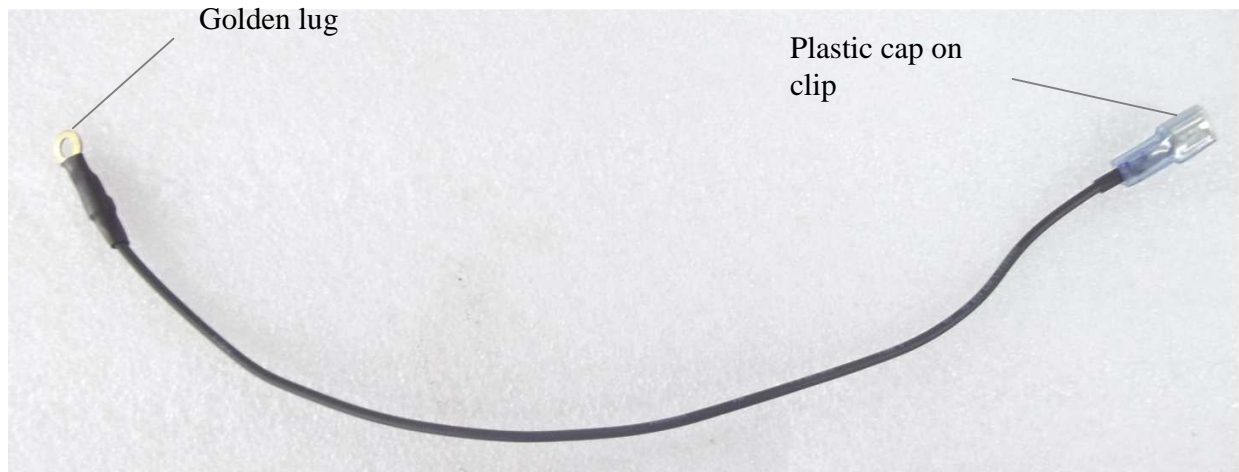

TOTAL LENGTH: FP7-30CM